


Your Vokèra Unica i combi boiler

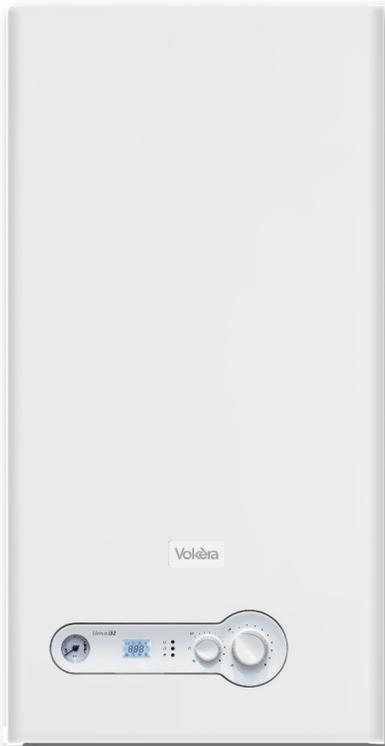

How to use your Unica i combi boiler

Your boiler is a combi boiler, it therefore provides hot water whenever a hot tap is opened, and central heating when required.

Setting the heating and hot water


1. **Check** that the boiler is turned on at the electricity supply. If it is not, turn the boiler ON. It will go through a self-test cycle that will last about 2 ½ minutes. Wait for this to end before adjusting the boiler.

2. **Choose** with the selector knob:

 **Standby** - no heating or hot water but boiler will protect itself against frost if cold

 **Summer position** - no heating, just hot water



 **Winter position** - heating and hot water

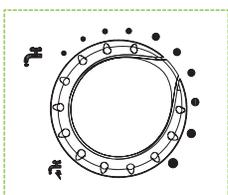

3. The temperature of the domestic hot water can easily be adjusted using the hot water temperature selector.

Rotate the temperature selector clockwise to increase the temperature and counter-clockwise to decrease the temperature - until you reach your desired setting. The temperature can be set from a minimum of 37°C to a maximum of 60°C.

4. **Boiler pressure.** When the needle is between 1 and 2 on the pressure gauge the boiler pressure is adequate, if the needle falls below 1 the boiler will need to be topped up using the filling loop.

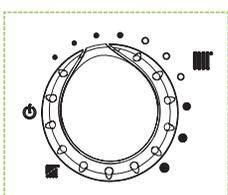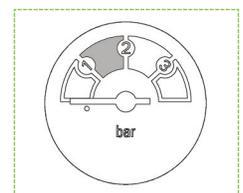

The central heating temperature can easily be adjusted using the heating temperature selector.

Rotate the temperature selector clockwise to increase the temperature and counter-clockwise to decrease the temperature - until you reach your desired setting. The temperature can be set from a minimum of 40°C to a maximum of 80°C.

Control overview



OpenTherm 711 Quick Start Guide

Setting the time of day and day of the week

Press the button then the button. Wait until the symbols start flashing, then press the again. Use the and buttons to set the hour. Press the button again to begin setting the minutes, use the and buttons to set the minutes, press the to exit.

Press the button then the button twice. The house symbol will now appear, when the symbols start flashing, press the button again and use the and buttons to set the day. When set press the button to exit.

Setting the temperatures

Press the button twice, when the temperature flashes, use the and buttons to set the desired comfort temperature. To set the economy temperature (*the minimum temperature you want the house to be*) press the button in this mode, use the and buttons to set, then press the button to exit.

Setting the 'on' and 'off' times

Press the button once, then press the button three times. Once the black bars start flashing, press the button again. Press the button until the display shows your desired time. By pressing the button, you can choose whether you wish to set the economy temperature (*bottom black bars*), the comfort setting (*top black bars*) or the OFF setting (*no black bars*). Pressing the button will copy the settings for each hour or 30 minute segment. Press the button to proceed to the next day and repeat for each day of the week.

How to over-ride the settings

Pressing the button will advance the settings. The 'party mode' symbol , will put the boiler on immediately and stay on indefinitely (*on first version, it will revert to original settings at midnight*). The 'holiday mode' symbol , will put the boiler in 'holiday mode' and will only operate at the economy temperature setting. If no symbols are displayed on the left, only the hot water will function.

The wifi symbol shows that communication is established and the heating is working from the programmed settings.

Customer Care Team

Our customer care centre in the UK is open Monday – Friday, 8.15am – 5pm and Saturday, 8am – 12pm. You can contact them via telephone on: 0344 391 0999 option 2 or email: service@vokera.co.uk.

If you are experiencing a problem with your appliance, we ask that you follow the simple initial checks below before logging a call with us:

- Check that you have an electricity supply to your appliance and the power switch is on
- If you have a pre-pay gas/electric meter, check that there is sufficient credit left
- If possible check that your mains gas is turned on
- Check that your mains water supply is on
- Check any boiler controls/programmers/thermostats are on and if battery operated the batteries are not flat
- If your problem relates to one water outlet, we advise that you contact your local plumber first to check the pipework

If you have checked all of the above and everything is in order, please have the following information to hand so that we can handle your request efficiently:

- Have you got hot water?
- Have you got central heating?
- Is there any visible damage to the flue outlet?
- Boiler Model Name
- Boiler Serial Number

Display descriptions

Symbol / Icon	Description
	Displayed when heating mode is active
	Displayed when hot water mode is active
	Displayed when frost protection function is active
	Displayed when hot-water pre-heat function is enabled. Flashes when functioning
	Displayed if an alarm or fault has been detected
	Displayed when low system pressure has been detected
	Displayed when an external sensor is connected to the boiler
	Displayed if an ignition fault has been detected