

TECHNICAL BULLETIN


RECONFIGURATION OF CLICK-FIT FLUE OUTLET

The 'Click-fit' flue outlet on the appliance can be easily reconfigured to enable a standard HE flue terminal* to be connected to the appliance, or if/when the rear flue terminal** is to be utilised.

To reconfigure:

- Locate and remove the 3 retaining screws that secure the white 'Click-fit' flange to the appliance (see below); retain the screws as they'll be required later.
- Remove the large black sealing gasket located below the 'Click-fit' flange and discard.
- **Do not remove** the black 60mm 'O' ring seal from the inner 60mm pipe
- Refit the 3 retaining screws.

The flue outlet is now ready to be used with the standard HE flue terminal* or can be closed off if the rear flue terminal** is being utilised.

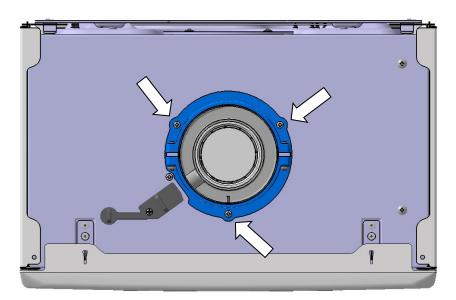

*Standard HF Flue Terminals

Otalidal di IIE i ido i cirrilliais	
Terminal Type	Code
Horizontal flue terminal	29450120 or 20132063
Telescopic flue terminal	29450121 or 20131981
Vertical terminal	29450122 or 20131983

**Rear Flue Terminal

Terminal Type	Code
Rear flue terminal	29450133 or 20132064

NOTE

These instructions should be read in conjunction with the appliance installation instructions and the instructions that are supplied with the individual flue accessories.